


118" x 96" FREESTANDING BRILLIANT LIGHTBOX
IG118X96




PLEASE REFER TO LAST PAGE OF
MANUAL FOR SEG INSTRUCTIONS

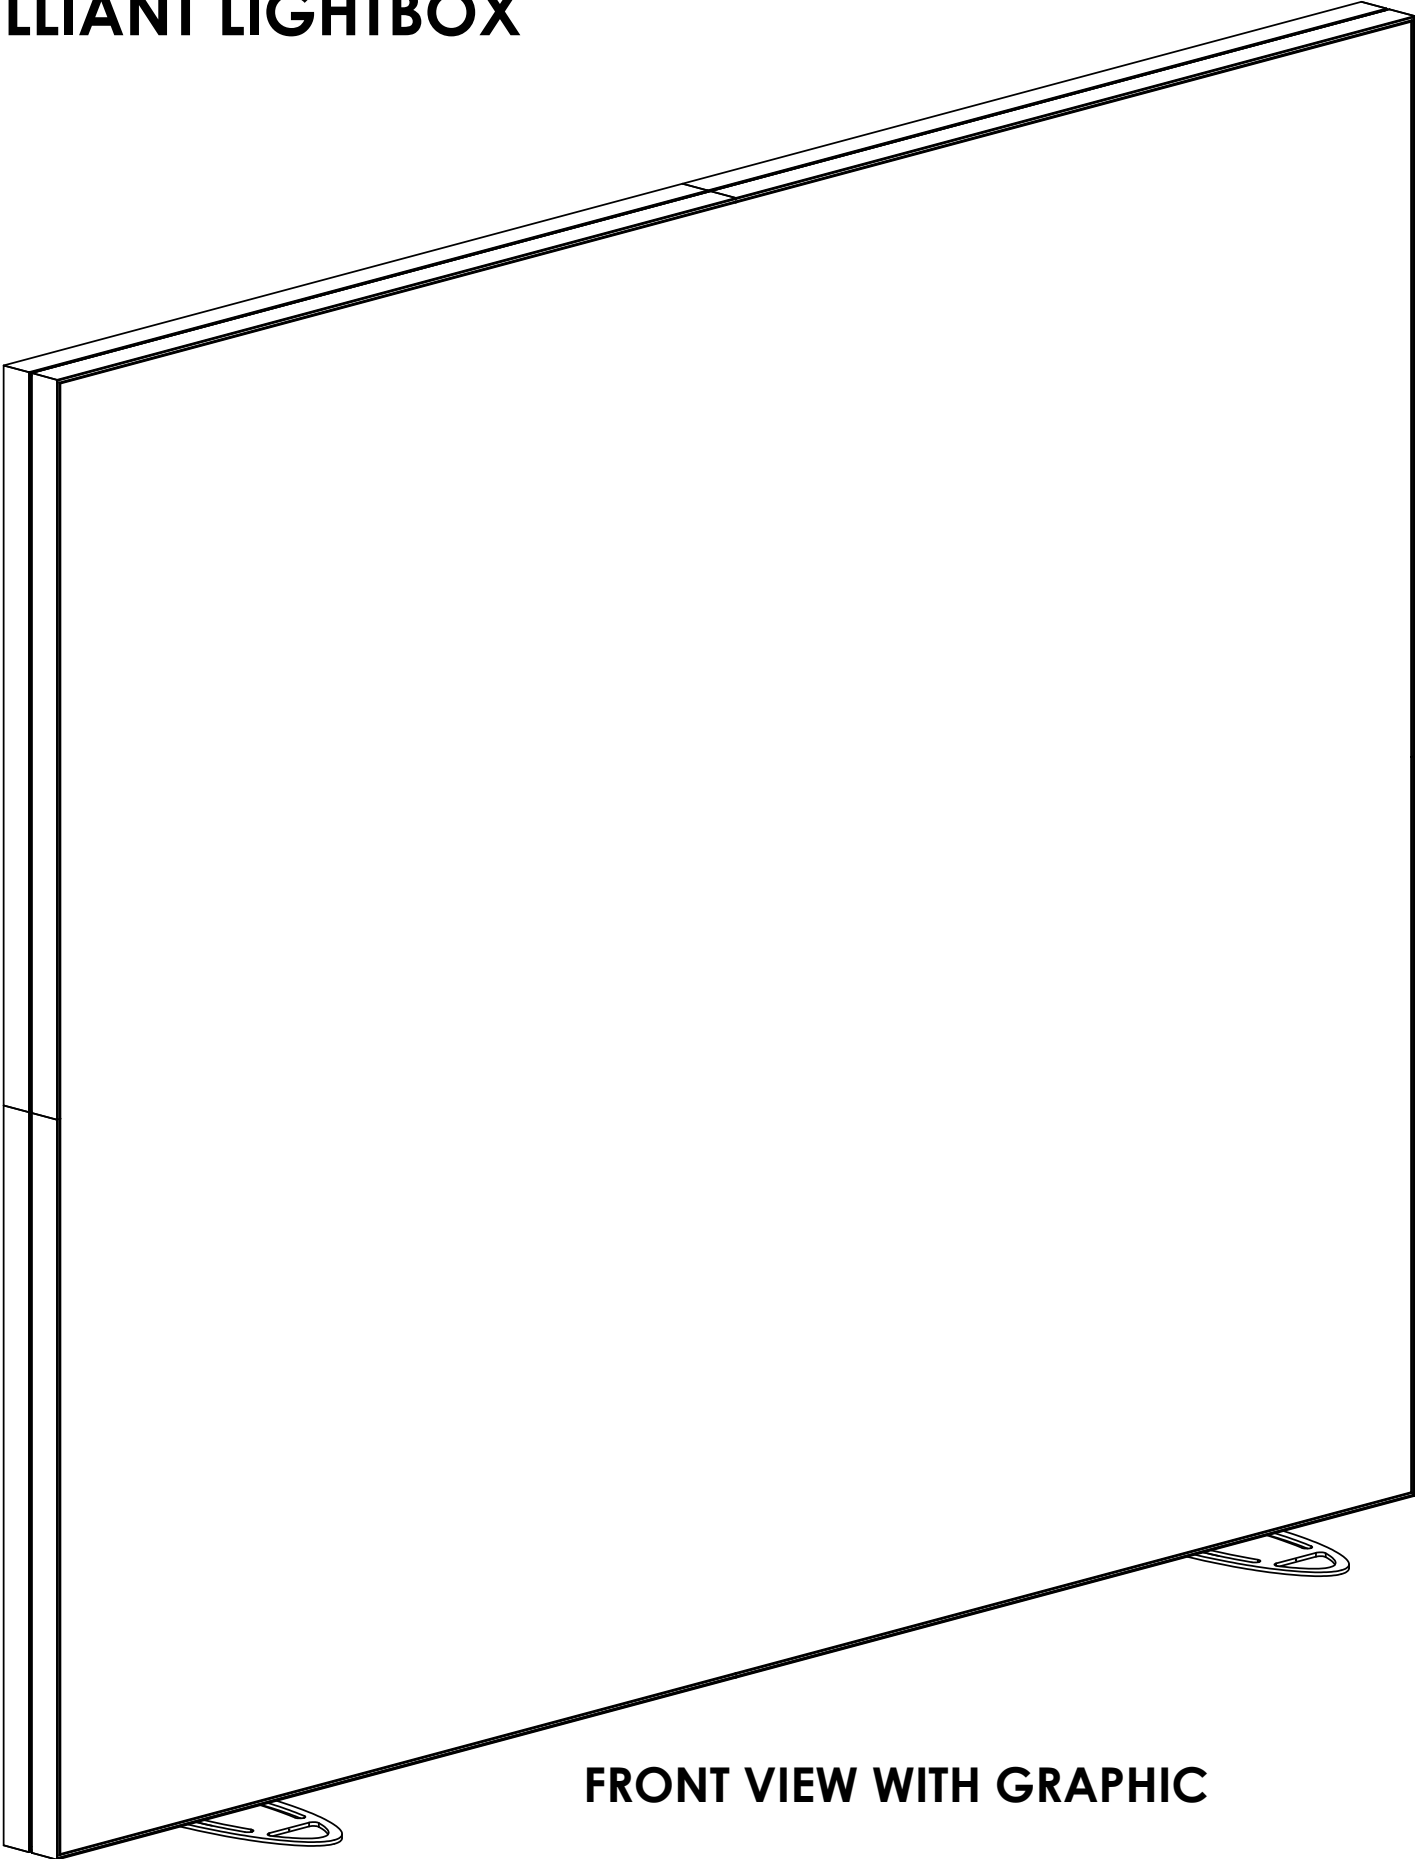

FRONT VIEW WITH GRAPHIC


SET-UP MANUAL

FINISH:	THIRD ANGLE PROJECTION		 THIS DOCUMENT AND DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED, OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT PERMISSION OF NIEDO GROUP, INC.	
MATERIAL:	NIEDO GROUP, INC.		5465 SW WESTERN AVE. BEAVERTON, OR 97005	
DIMENSIONS ARE IN MILLIMETERS		118" x 96" FREESTANDING IGNITER LIGHTBOX SETUP INSTRUCTION		
TOLERANCES UNLESS OTHERWISE SPECIFIED				
SIZE B		DWG. NO.		REV -01
SCALE: NA		DO NOT SCALE DRAWING		SHEET 1



118" x 96" FREESTANDING BRILLIANT LIGHTBOX
IG118X96



GENERAL NOTES & DETAIL

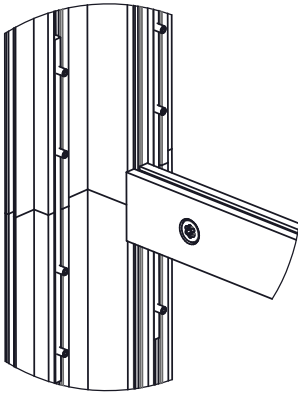

HORIZONTAL AND VERTICAL FRAME SUPPORTS LOCK INTO **CENTER** CHANNEL OF FRAME, AS SHOWN

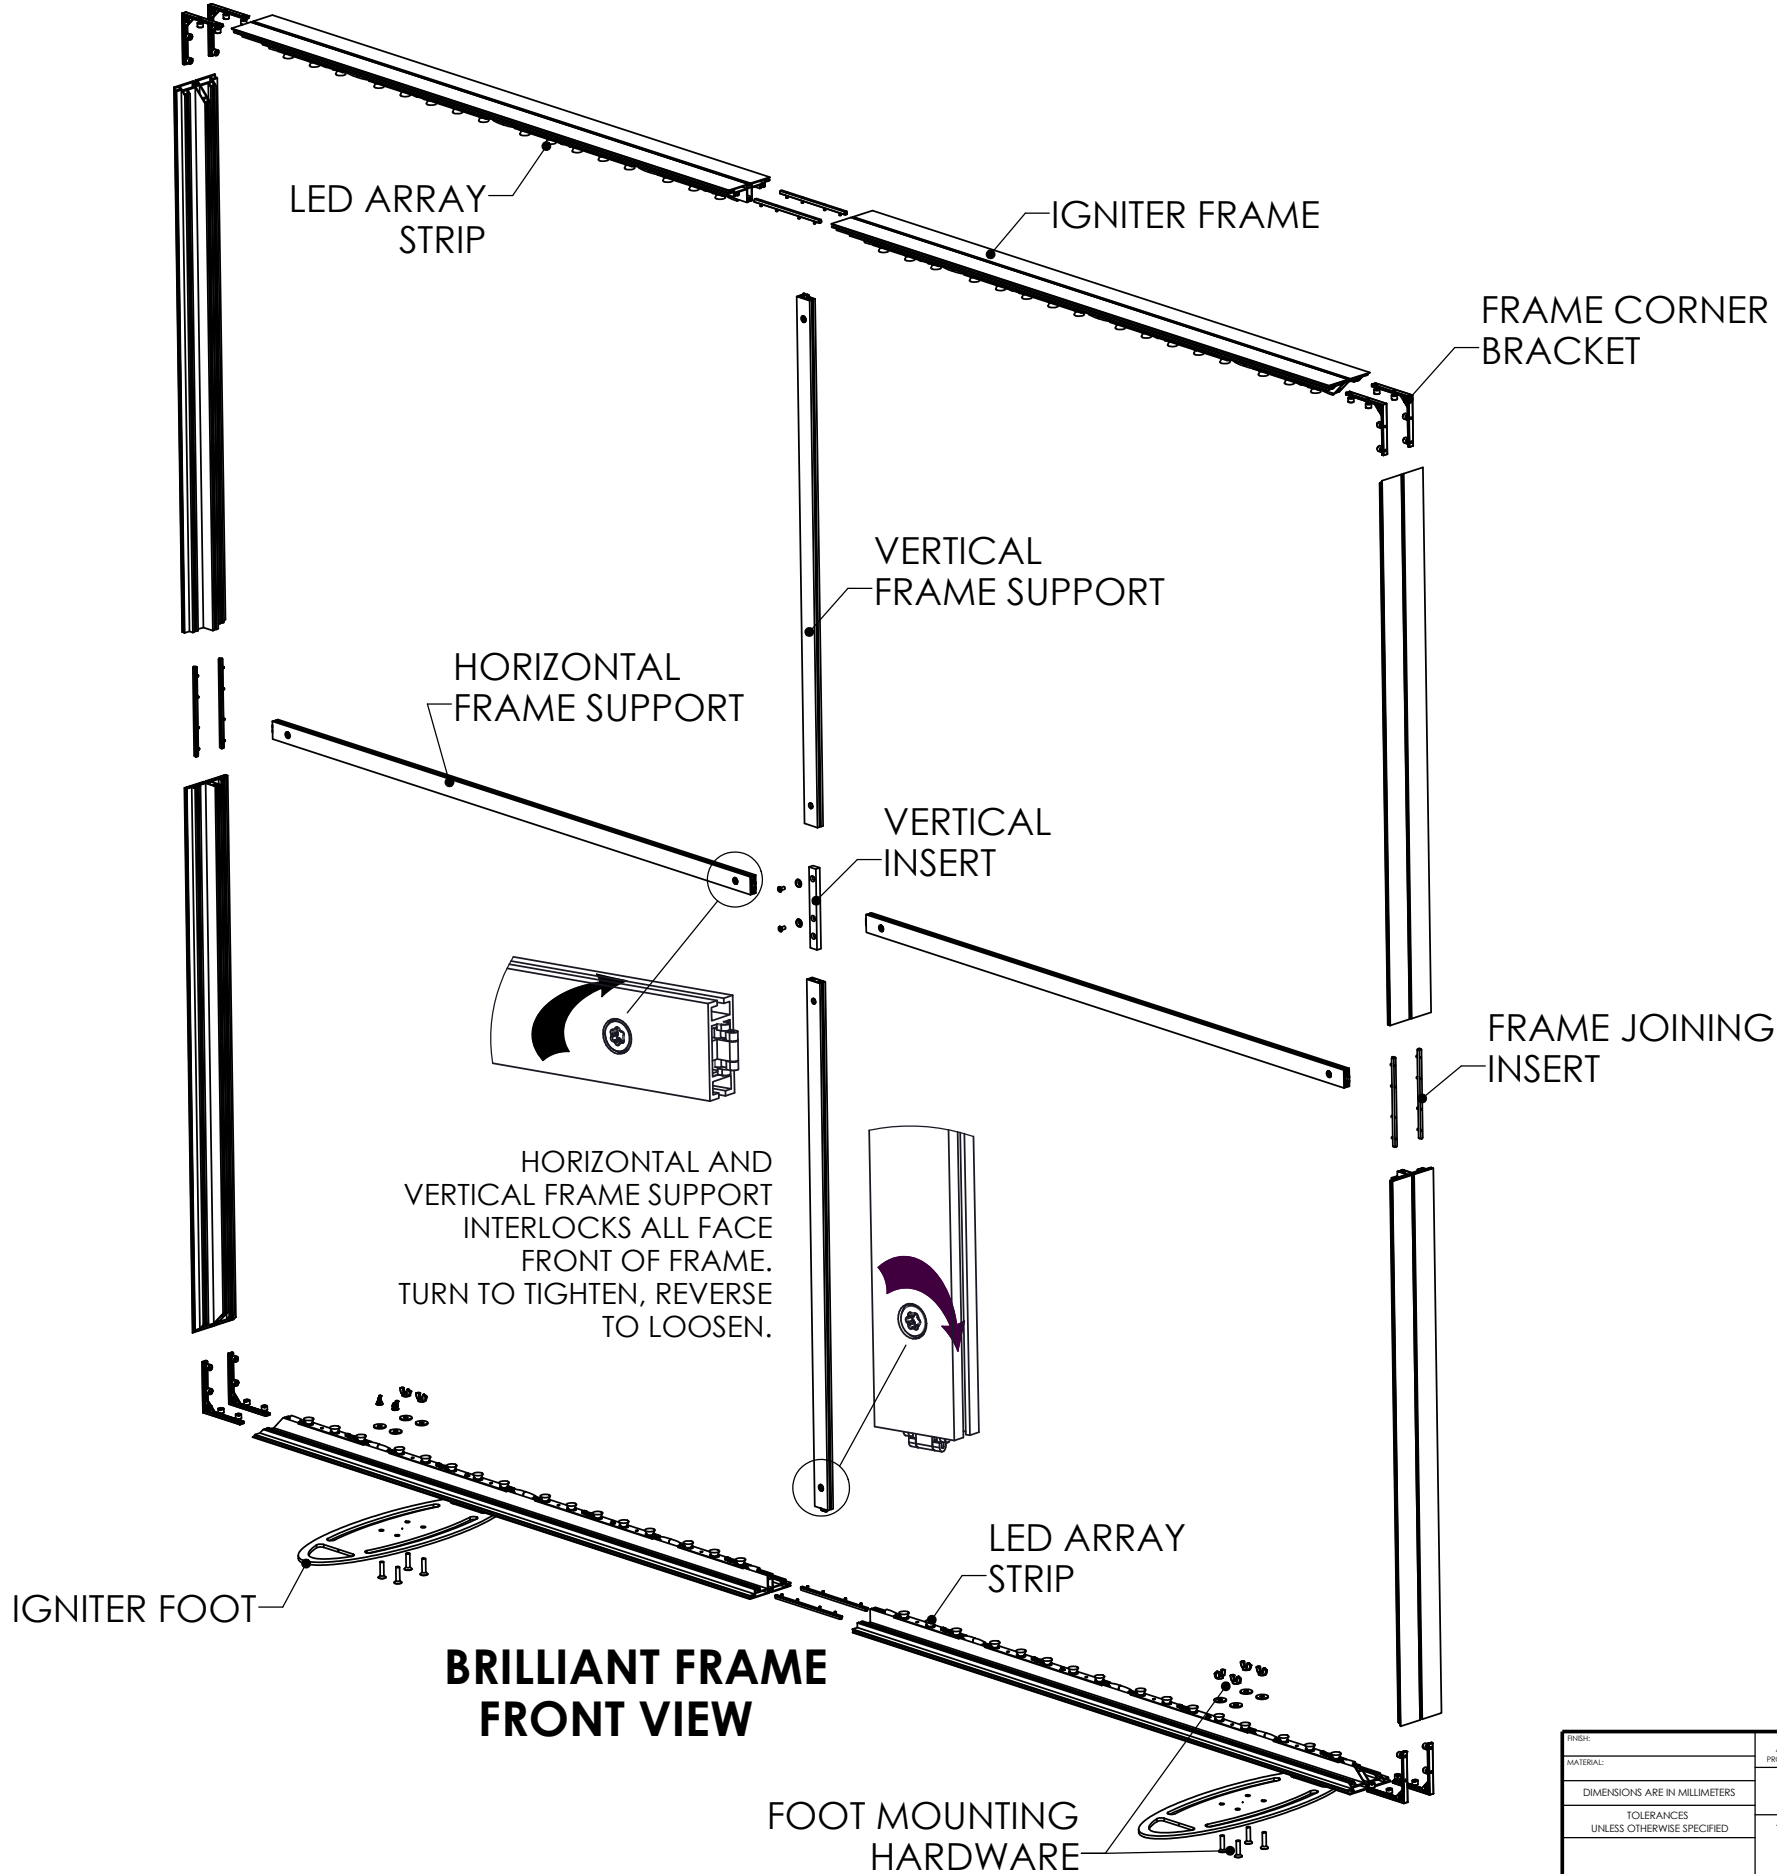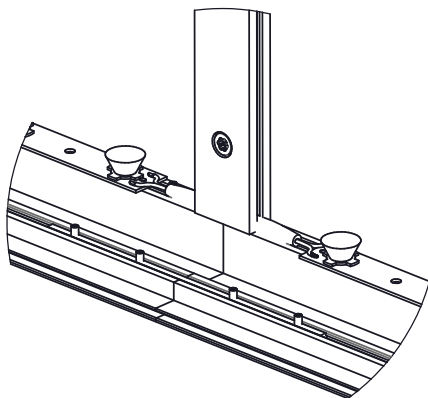

FINISH:		THIRD ANGLE PROJECTION		PROPERTY: THE DOCUMENT AND DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED, OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT PERMISSION OF NIEDO GROUP, INC.	
MATERIAL:		NIEDO GROUP, INC. 5465 SW WESTERN AVE. BEAVERTON, OR 97005			
DIMENSIONS ARE IN MILLIMETERS		TOLERANCES UNLESS OTHERWISE SPECIFIED		118" x 96" FREESTANDING IGNITER LIGHTBOX SETUP INSTRUCTION	
SIZE B	DWG. NO.			REV -01	
SCALE: N/A	DO NOT SCALE DRAWING	SHEET 1			

118" x 96" FREESTANDING BRILLIANT LIGHTBOX IG118X96



FRAME ASSEMBLY DETAILS

1. WITH FRAME FLAT ON THE FLOOR ASSEMBLE FRAME SIDES WITH JOINT INSERTS IN OUTSIDE CHANNELS OF FRAME AS SHOWN. TIGHTEN SETSCREWS.

2. ASSEMBLE CORNERS USING CORNER BRACKETS INSERTED INTO OUTSIDE CHANNELS OF FRAME AS SHOWN. FINGER TIGHTEN THUMB SCREWS ONLY.

3. ASSEMBLE FEET TO FRAME WITH SCREWS AND HARDWARE PROVIDED. FINGER TIGHTEN WING NUTS. STAND FRAME UP TO CONTINUE.

FINISH:	THIRD ANGLE PROJECTION	THIS DOCUMENT AND DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED, OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT PERMISSION OF NIEDO GROUP, INC.
MATERIAL:		
DIMENSIONS ARE IN MILLIMETERS	NIEDO GROUP, INC. 5465 SW WESTERN AVE. BEAVERTON, OR 97005	
TOLERANCES UNLESS OTHERWISE SPECIFIED	118" x 96" FREESTANDING IGNITER LIGHTBOX SETUP INSTRUCTION	
SIZE: B	DWG. NO.	REV. -01
SCALE: NA	DO NOT SCALE DRAWING	SHEET 1

118" x 96" FREESTANDING BRILLIANT LIGHTBOX
IG118X96




FRAME SUPPORT ATTACHMENT DETAIL


4. ASSEMBLE LONG VERTICAL SUPPORT BY COUPLING THE 2 SECTIONS USING THE VERTICAL INSERT AND INCLUDED HARDWARE. BE SURE THAT BOTH SCREWS ARE TIGHT.

5. ASSEMBLE THE COMPLETE VERTICAL SUPPORT TO THE FRAME BY INSERTING THE TOP AND BOTTOM INTERLOCK MECHANISMS INTO THE TOP AND BOTTOM FRAME CENTER CHANNELS. TIGHTEN THE INTERLOCKS AS IN DETAIL A.

SEE DETAIL A

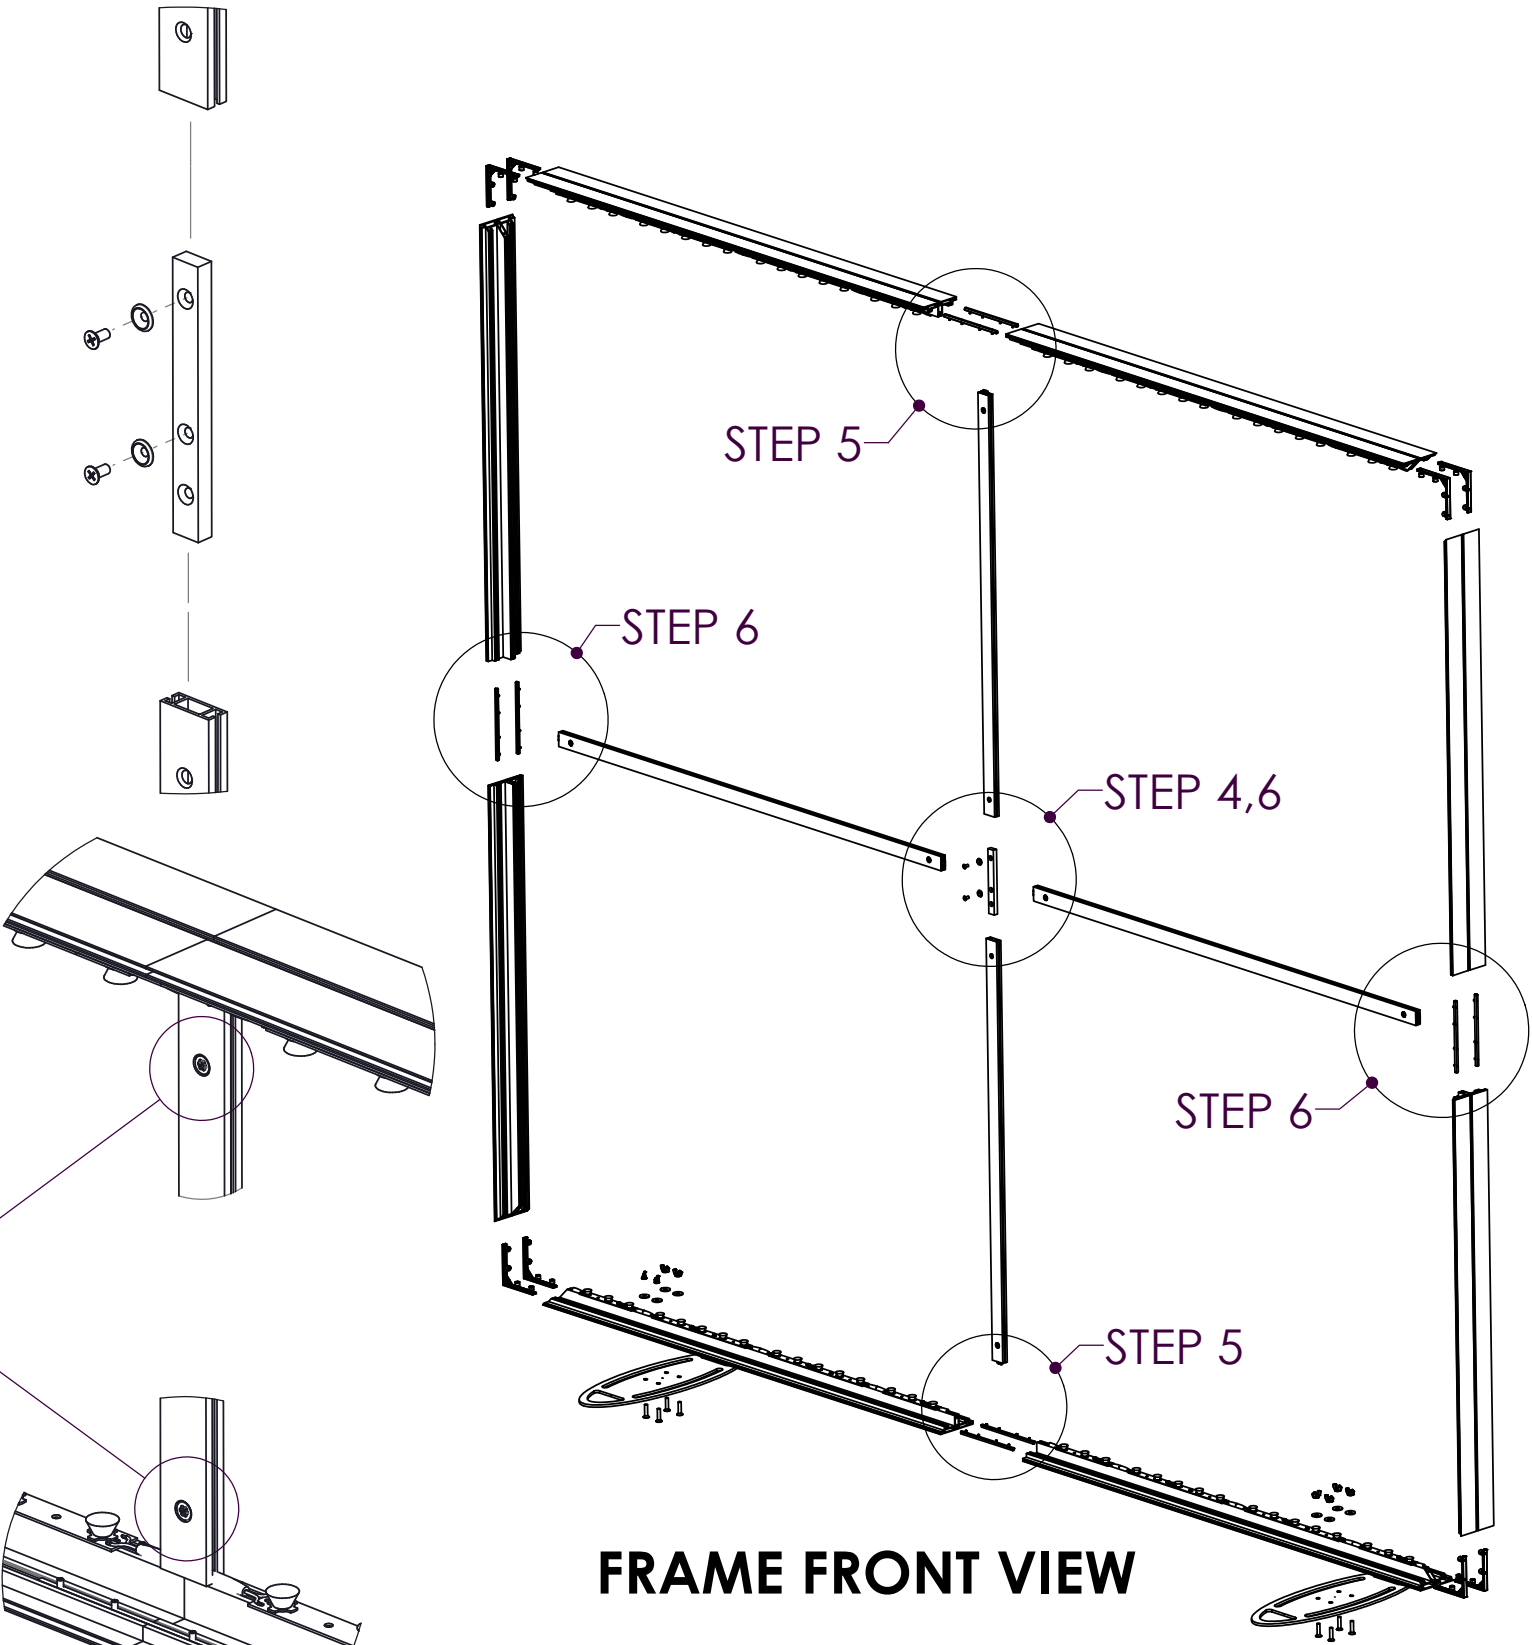


FRAME FRONT VIEW

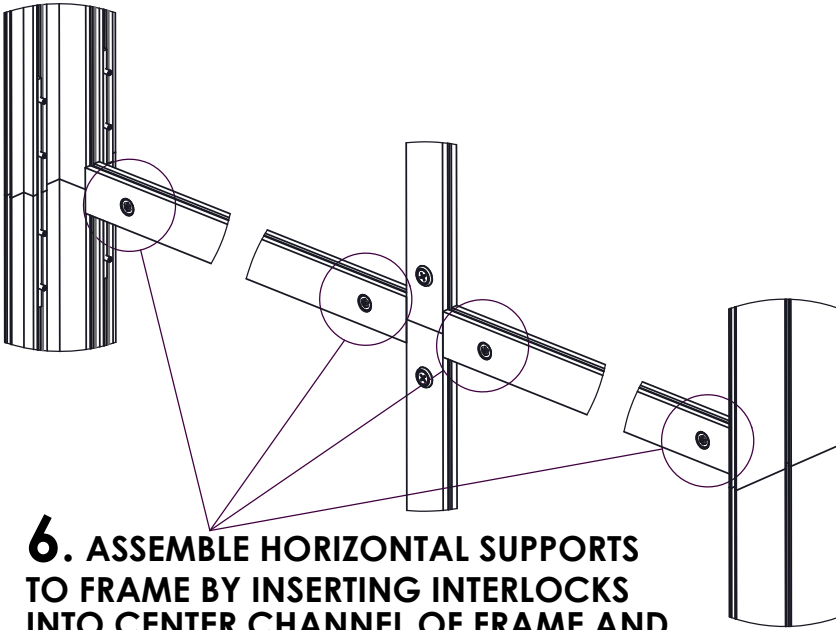

6. ASSEMBLE HORIZONTAL SUPPORTS TO FRAME BY INSERTING INTERLOCKS INTO CENTER CHANNEL OF FRAME AND SIDE CHANNEL OF VERTICAL POST. TIGHTEN INTERLOCKS AS IN DETAIL A.

DETAIL A

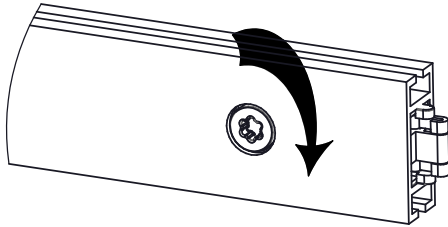


Z4400 EXTRUSION INTERLOCK. TURN TO TIGHTEN, REVERSE TO LOOSEN.

FINISH:	THIRD ANGLE PROJECTION	THIS DOCUMENT AND DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED, OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT PERMISSION OF NIEDO GROUP, INC.
MATERIAL:		
DIMENSIONS ARE IN MILLIMETERS		
TOLERANCES UNLESS OTHERWISE SPECIFIED		
SCALE: NA	DO NOT SCALE DRAWING	SHEET 1
REV. B	OWG, HCL	REV. -01
NIEDO GROUP, INC. 5465 SW WESTERN AVE. BEAVERTON, OR 97005		
118" x 96" FREESTANDING IGNITER LIGHTBOX SETUP INSTRUCTION		

118" x 96" FREESTANDING BRILLIANT LIGHTBOX
IG118X96



LED ARRAY INTERCONNECT DETAIL

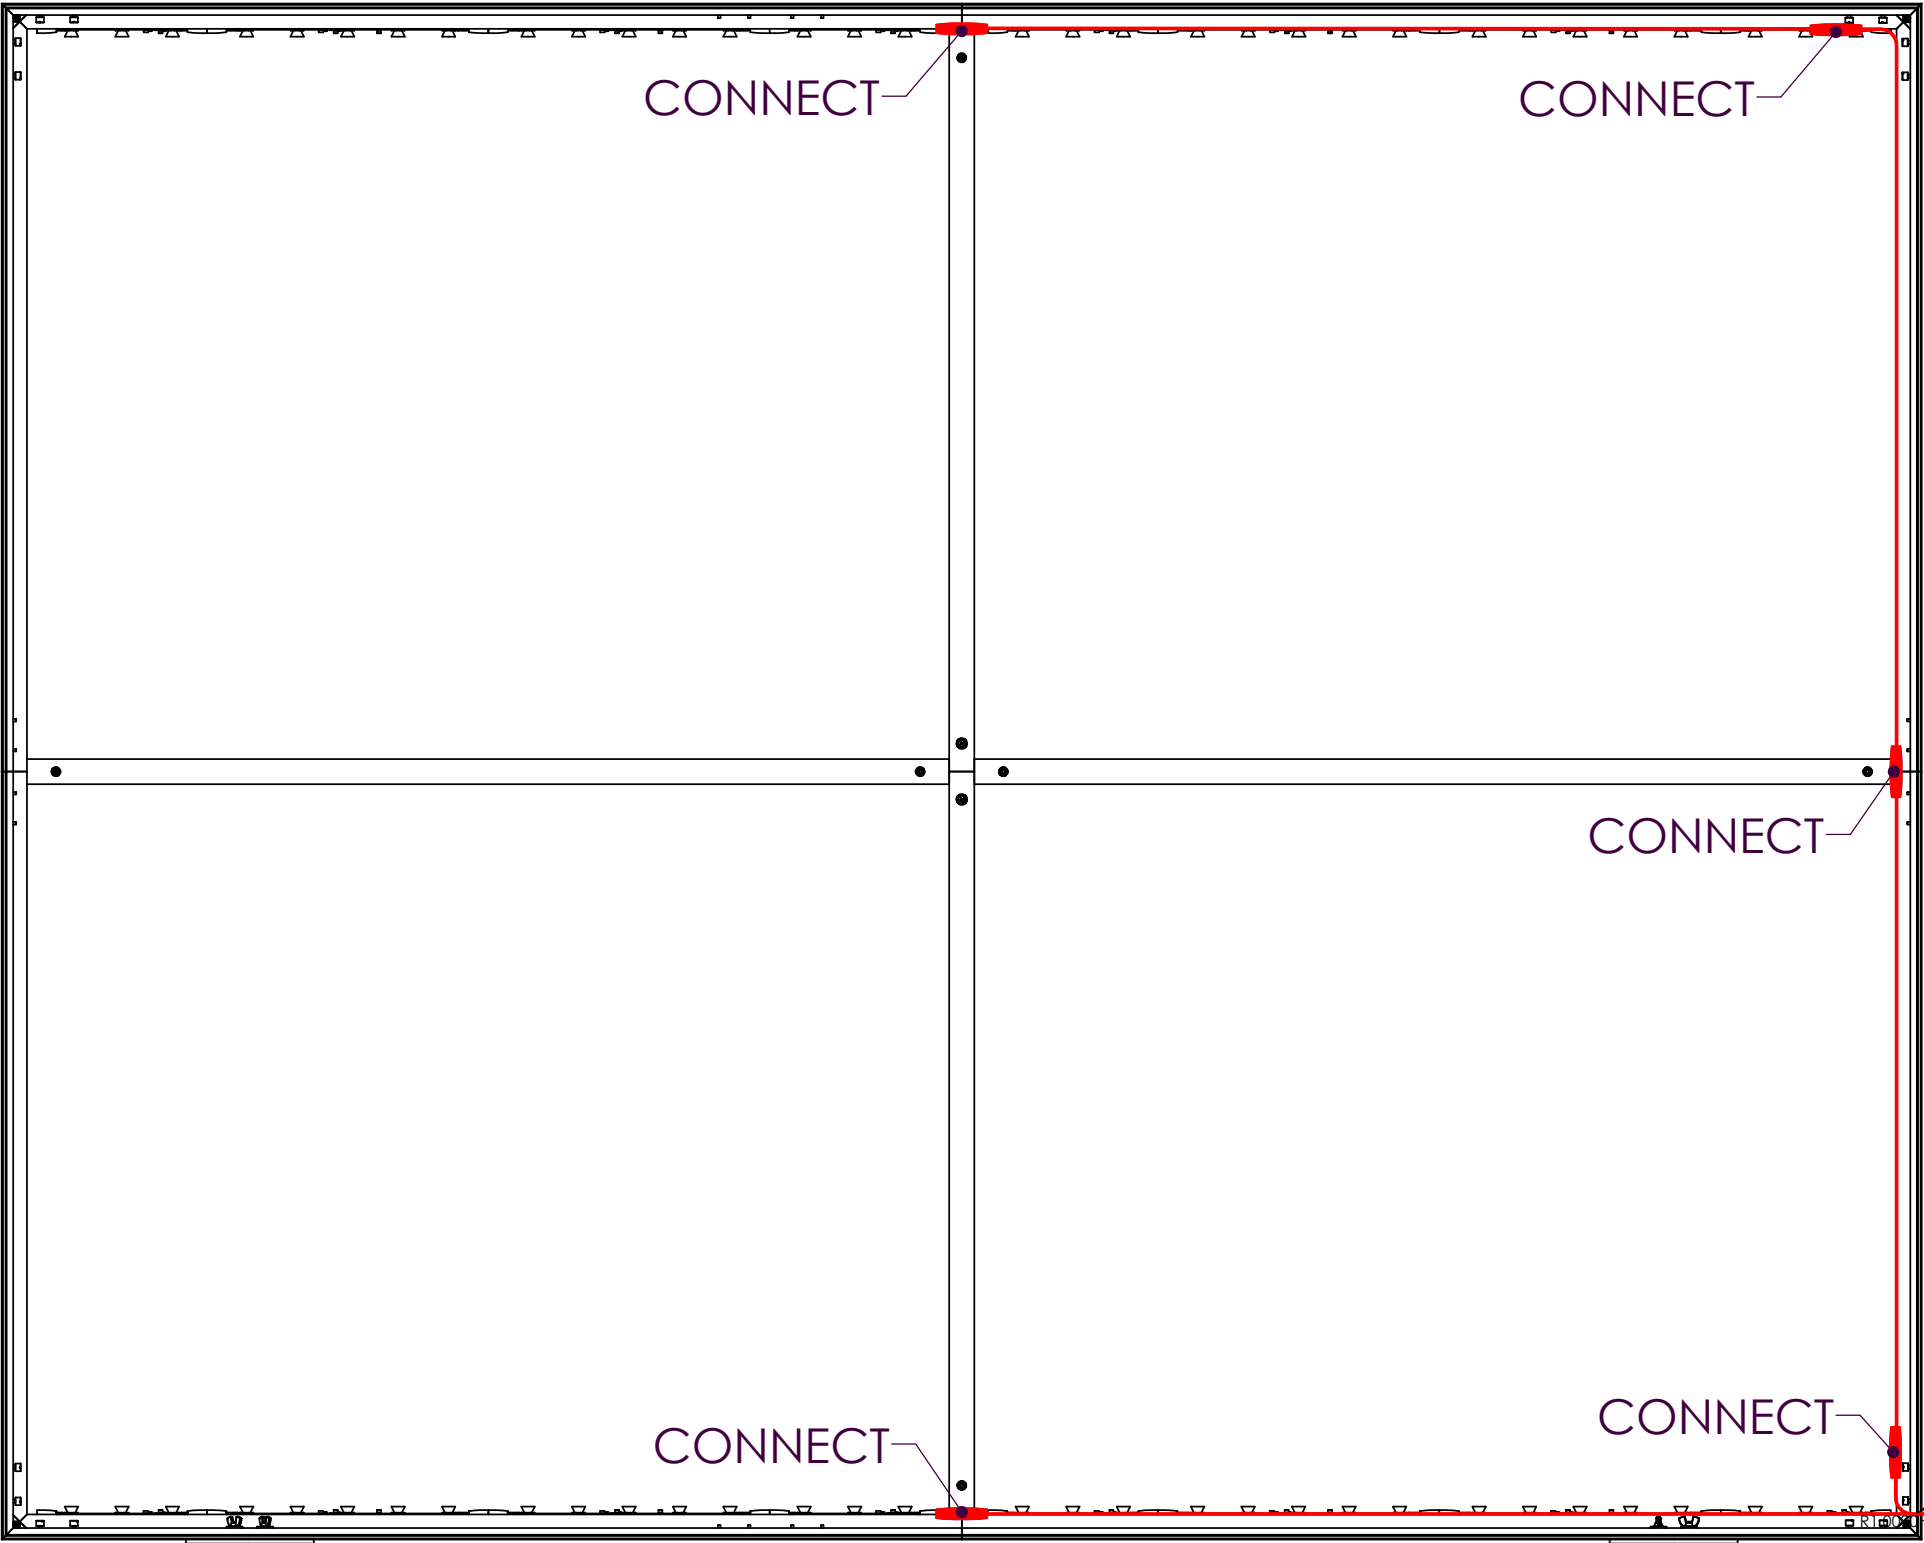

CABLES EXIT
FROM FRAME

POWER
SUPPLY

FINISH:	THIRD ANGLE PROJECTION	THIS DOCUMENT AND DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED, OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT PERMISSION OF NIEDO GROUP, INC.	
MATERIAL:		NIEDO GROUP, INC. 5465 SW WESTERN AVE. BEAVERTON, OR 97005	
DIMENSIONS ARE IN MILLIMETERS		118" x 96" FREESTANDING IGNITER LIGHTBOX SETUP INSTRUCTION	
TOLERANCES UNLESS OTHERWISE SPECIFIED			
SIZE B	DWG. NO.	REV -01	
SCALE: NA	DO NOT SCALE DRAWING	SHEET 1	

Silicone Edge Graphics (SEG)

Installation Instructions into hardware

What are Silicone Edge Graphics (SEG)?

SEG are dye-sublimation fabric graphics with silicone strips sewn along the underside of the fabrics edge. SEG frames have grooves along their perimeter designed to snugly hold the silicone strips so the fabric can be stretched across the frame for a drum-tight fit.



We recommend laying the frame on the floor, then draping the fabric graphic on top.

The following procedure ensures the silicone edge will be place evenly over the entire frame and NOT STRETCH or GROW at the corners. Once all the edges have been secured, you should have a taut fit with a smooth flat finish.

1: With Clean Hands,


Press SEG silicone edge first, into the corners of the frame.



2: Working in Centers.

Go back and press the silicone edge into the center - on eachside of the frame.

EXAMPLE: A 20"x20" fabric/frame would be pressed in 8 locations.

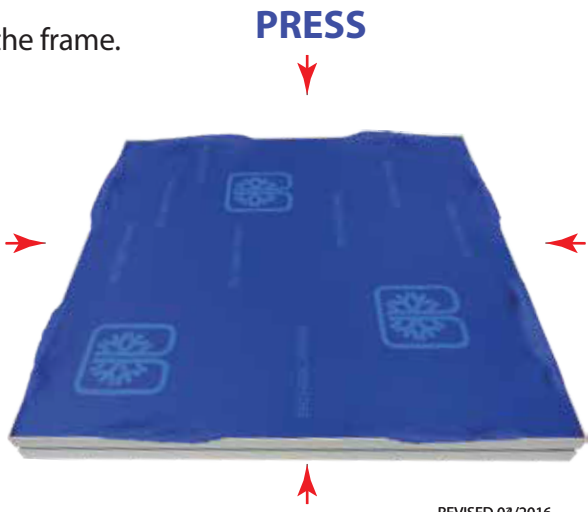



Cont'd.

3: Working in Centers again,

Go back and press the silicone edge once again on each side previous center, on all 4 sides.

Repeat this process, (WORKING IN CENTERS) until the SEG fabric's edge is pressed aproximately every 6 inches apart.

EXAMPLE: A 8' x 8' frame (using this procedure) will have been pressed/tucked 15 times (not including corners) on each side of the frame.

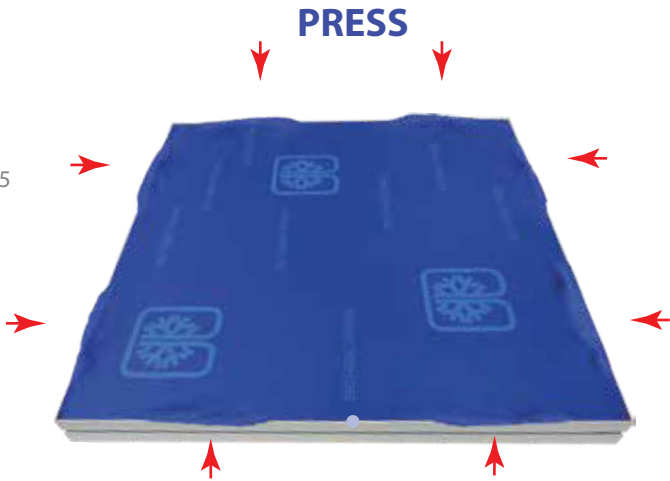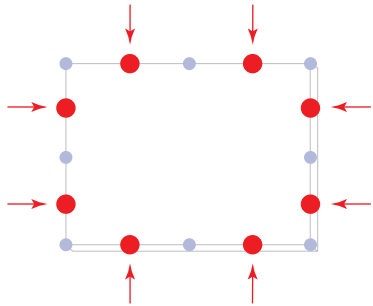

4: After all has been pressed into your frame using

this procedure, lightly tap your forefinger to smooth fabric between the tucks.



CARE INSTRUCTIONS

Due to the fine quality, smoothness and weave of the fabric, great care must be taken to extend the life of your SEG fabric graphics.

We recommend very loosely folding your graphic, making sure there are no hard creases or folds or that the fabric doesn't catch on sharp obects.

Store in a clean bag.
A plastic bag or pillow case is ideal.
Graphics can also be spot cleaned with a damp cloth.

To wash entire graphic, use a commercial size front loading washing machine on gentle cycle with cool water. Do NOT dry clean.

You can also gently iron the back side using the Polyester setting of your iron.

